

## TESVOLT ENERGY MANAGER: INITIAL USER SETUP

Every TESVOLT Energy Manager shipped after the 1<sup>st</sup> of August 2025 comes with a pre-installed license (with the new article number 106248). Therefore the license key no longer needs to be communicated separately by mail, and it is no longer required to bring it to the site for the commissioning by hand.


**PLEASE NOTE:** For the initial setup of the TESVOLT Energy Manager the PUK is required. This code can be found behind the cover 02 of the TESVOLT FORTON (see chapter 6.4 “Commissioning of the Energy Storage” in the manual of instruction of TESVOLT FORTON) on a black label with white text.

You may change the language to English by clicking on the  icon in the top right corner.

### How to initially setup a user with the TESVOLT Energy Manager?

Start the TESVOLT Energy Manager as usual with a local browser (e.g. Google Chrome, MS Edge or Firefox) and enter the IP address of the TESVOLT Energy Manager as the network address. You can find more detailed information about commissioning the TESVOLT Energy Manager in the user manual.

On the login screen of the TESVOLT Energy Manager locate the button “Create/reset credentials”. By clicking it you can setup a new user and use it for login moving forward.

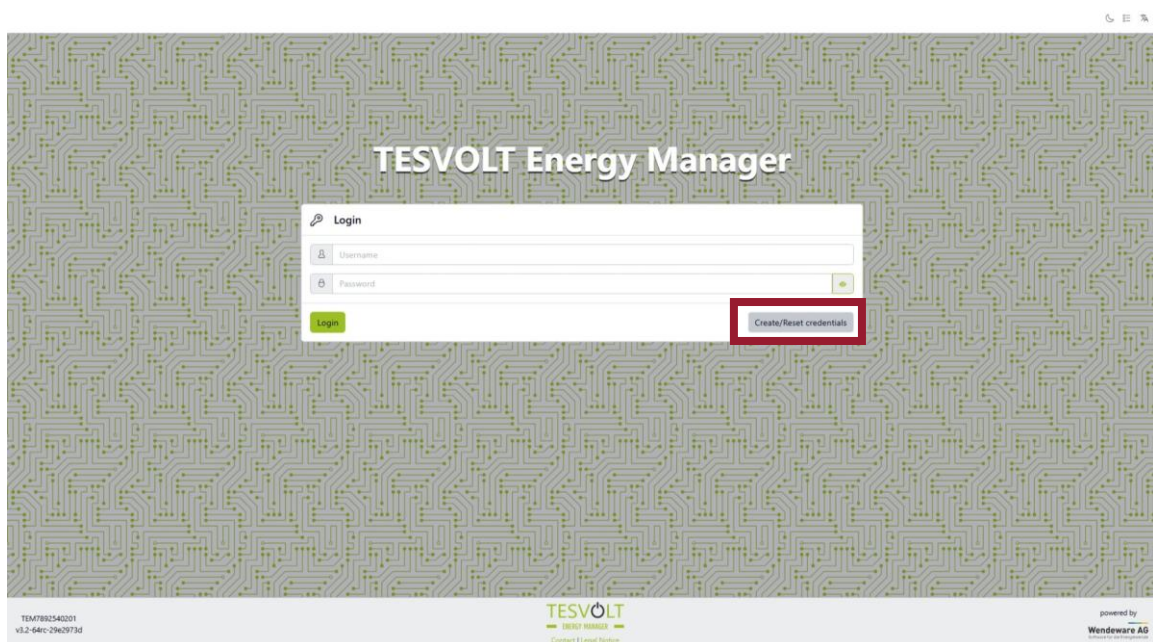

On the next page enter the PUK. You can locate the PUK code on the left side of the casing (black label with white text). In case the system asks for an “Initial Password” in the first entry, instead of the PUK, please click the button “Initial Password” on the right of the line. The view will switch to the entry for the PUK. Now enter a username and password of your choice. The password needs to include at least one upper- and lower-case letter, one number and one special character. Repeat the password. Confirm by clicking on “Create account”.

You will now be redirected to the login screen of the TESVOLT Energy Manager. Now enter the created username and password and confirm by clicking on “Login”.

For every following login you only require your username and password for direct access.